ack a Dec



ne year from date of ourchase, to correct by out charge any defect due to faulty material the complete unit, transportation prepaid, to er or Authorized Service Station. Naturally, lamage caused by misuse, careless handling or attempted by others. No other guarantee, y us.

& Decker guarantees, for one y ir or parts replacement without corkmanship. Simply return the corkmanship. Simply return the casume no responsibility for daminer repairs have been made or a en or verbal, is authorized by us

O.

RELIABILITY, repairs, maintenance BLACK & DECKER Service Center t SAFETY and I

IMPORTANT!

performed by beach & becare center organizations, always using BLACK & DECKER	ICE CENTERS	NEBRASKA: Omaha 63102, 2218 Lawemouth & NEW JERSEY: Newark O7104, 865 Broadway. NEW MEXICO. Chaluquequeg 8110, 4700 Loman New Vork 10014, 225 Varies 8110, 4700 Loman New York 10014, 227 Varies 8110, 4700 Loman New York 10014, 227 Varies 8110, 4700 Loman New York 10014, 227 Varies 8110, 4700 Loman New York 10014, 2700 Lowelland A1120, 2700 Lowelland A1120, 2700 Lowelland A1120, 2700 Lowelland A113, 3700 Lowelland A114, 3700 Lowelland A113, 3700 Lowelland A113, 3700 Lowelland A114, 3700 Lowelland A114, 3700 Lowelland A114, 3700 Lowelland A114, 3700 Lowelland Road Lowelland A114, 3700 Lowelland A114, 3700 Lowelland Road Lowelland A114, 3700 Lowelland Road Lowelland A114, 3700 Lowelland A114, 3700 Lowelland Road Lowelland A114, 3700 Lowelland
always	ERV	Telephone No. 234-6691 Mo. 46.1332 Mo. 46.
ons,	S	Odder of the control
qualified service organization	FACTORY SALES & SERVICE CENTERS	ALABAMA: Birmingham 35233, 1717 Third Ave., South ARIZONA: Pheenix 85004, 537 E. McDowell Rd. ARIZONA: Pheenix 85004, 537 E. McDowell Rd. ARIZONA: Angeres 20077, 2522 S. Euclid Ave. CALI CPRIAN. Anhelm 92902, 1235 So. Euclid Ave. Dokkand 34606, 1107 E. 14th St. Dokkand 34606, 1107 E. 14th St. Sacromento 3834, 1819 12-sewmeenth Street San Francisco 39408, 1119 Sewmeenth Street San Francisco 20408, 1119 Sewmeenth Street DISTRICT FO COLUMBIA: Washington Blaidenburg, Maryland 20710, 4501 Baltimore Ave. Eleic Chrent, Wirginia 22408, 2524 Pearl Street CEOPGIA. Jacksonville 32208, 524 Pearl Street Mann 33509, 3401 W. Kennedy Blod. CEOPGIA Atlant 3913, 318 San Sewmeth Avanue Tempa 33509, 3401 W. Kennedy Blod. CEOPGIA Atlant 3913, 318 San Sewmeth Avanue Tempa 33509, 3401 W. Kennedy Blod. CEOPGIA Atlant 3913, 318 San Sewmeth Avanue Tempa 33509, 3401 W. Kennedy Blod. CEOPGIA Atlant 51201, 755 30th Street CEOPGIA Atlant 61201, 755 30th Street CONNECT Louisville 40209, 4407 Pearl Blod. MARYLAND Baltimore 2121, 203 West 28th Street Towners 32504, 701 East Joppa Road. Towners 32504, 701 East Joppa Road

WASHINGTON: Seattle 1981.19, 701 Third. North Spoken 9520/3 1980 North Market Street WEST VIRGINIA: Charleston 2512, 1638 Stkth Ave. WISCONSIN: Milwaukee 53213, Blue Mound Road	BLACK & DECKER MFG. Co., Limited, Canada Water Streat 0.1 Ith Annue Stw. 0.1 Meanue Stw. 0.1 Meanue Stw. 0.1 Meanue Stw. 0.1 Meanue Stw. 0.2 Meanue Stw. 0.3 Meanue Stw. 0.4 Meanue Stw. 0.5 Meanue Meanue Stw. 0.5 Meanue Meanue Stw. 0.5 Meanue Meanue Meanue Meanue Stw. 0.5 Meanue Mean	AUTHORIZED SERVICE STATIONS
Ave., S.W. 616 594-7708 Incollet Ave. 616 84-7708 Incollet Ave. 616 HA 1-1493 Nee Trafficway 816 HA 1-1493 Nee Trafficway 314 JE 3-2210	BLACK & DECKER MFG Walter Street 1003 11th Avenue, S.W. 114 Stown Cell at S. Street 114 Stown Cell at S. Street 115 Developed Avenue 150 Parkedale Avenue RU- 150 Parkedale Avenue RU- 151 Stown Cell avenue RU- 151 Stown Cell avenue RU- 151 Lawrence Blvd. 152 Lawrence Blvd. 152 Lawrence Blvd. 153 Romald Drive	AUTHORIZED SEI

4700 R.P.M.

Ę.

 $1\frac{1}{2}$

9.5 AMPS

ONLY

120 VOLTS A.C.

to

BEVEL ADJUSTMENT: 0°

At 45°

23/8".

ç

。 06

DEPTH: At

21204, U.S.A.AL) Printed in U.S TOWSON, MD. BLACK & DECKER MFG. CO.,

Black & Decker 71/4" SAWCAT-



P.T.I. SAFETY RULES FOR POWER TOOLS

- 1. KNOW YOUR POWER TOOL Read owner's manual carefully. Learn its applications and limitations as well as the specific potential hazards peculiar to this tool.
- 2. GROUND ALL TOOLS UNLESS DOUBLE-INSULATED. If tool is equipped with three-prong plug, it should be plugged into a three-hole electrical receptable. If adapter is used to accommodate two-prong receptacle, the adapter wire must be attached to a known ground. Never remove third prong.
- 3. KEEP GUARDS IN PLACE and in working order.
- 4. KEEP WORK AREA CLEAN. Cluttered areas and benches
- 5. AVOID DANGEROUS ENVIRONMENT. Don't use power tool in damp or wet locations. And keep work area well lit.
- 6. KEEP CHILDREN AWAY. All visitors should be kept safe distance from work area.
- 7. STORE IDLE TOOLS. When not in use, tools should be stored in dry, high or locked-up place - out of reach of
- 8. DON'T FORCE TOOL. It will do the job better and safer at the rate for which it was designed.
- 9. USE RIGHT TOOL. Don't force small tool or attachment to do the job of a heavy duty tool.
- 10. WEAR PROPER APPAREL. No loose clothing or jewelry to get caught in moving parts. Rubber gloves and footwear are recommended when working outdoors.
- 11. USE SAFETY GLASSES with most tools. Also face or dust mask if cutting operation is dusty.
- 12. DON'T ABUSE CORD. Never carry tool by cord or yank it to disconnect from receptacle. Keep cord from heat, oil and
- 13. SECURE WORK. Use clamps or a vise to hold work. It's safer than using your hand and it frees both hands to
- 14. DON'T OVERREACH. Keep proper footing and balance at all
- 15. MAINTAIN TOOLS WITH CARE. Keep tools sharp at all times, and clean for best and safest performance. Follow instructions for lubricating and changing accessories.
- 16. DISCONNECT TOOLS. When not in use, before servicing. when changing accessories such as blades, bits, cutters, etc.
- 17. REMOVE ADJUSTING KEYS AND WRENCHES. Form habit of checking to see that keys and adjusting wrenches are removed from tool before turning it on.
- 18. AVOID ACCIDENTAL STARTING. Don't carry plugged-in tool with finger on switch.

ADDITIONAL SAFETY RULES FOR SAWS

- 1. **DISCONNECT PLUG** from power supply before changing blades, making cutting depth or cutting angle adjustments, lubricating, inspecting, or when saw is not being used.
- 2. WHEN RETRACTING the lower blade guard, always use the retracting lever on the guard.
- 3. NEVER TIE BACK the lower blade guard or its retracting knob.
- 4. WHEN SAWING never reach underneath the material.
- 5. KEEP BLADE SHARP. Dull blades may cause the saw to swerve or stall under pressure.
- 6. IF YOU DROP or damage the saw, unplug it first; then check to see if the blade and lower blade guard operate freely before resuming operations.
- 7. IF SAW STALLS, release the trigger and disconnect plug from power supply before attempting to loosen the unit.

MOTOR

Your Black and Decker tool is powered by a B&D-built motor. Be sure your power supply agrees with voltage marked on nameplate. Volts AC means Alternating Current (25 to 60 cycles) only. Volts AC/DC means it will also operate on Direct Current (single speed unit only). Voltage variation of more than 10% will cause loss of power and over-heating. All B&D tools are factory-tested. If this tool does not operate, check the power supply line for blown fuses and the plug and receptacle for proper contact.

GROUNDING


These units are equipped with approved 3-conductor power cord and 3-prong grounding type attachment plug to be used with the proper grounding type receptacle, in accordance with the National Electrical Code, Canadian Electrical Code, and Underwriters' Laboratories specifications. The green colored conductor in the cord is the grounding wire. It is connected to the metal frame of the unit inside the housing and to the longest prong of the attachment plug. Never connect the green wire to a "live" terminal.

If your unit requires less than 150 volts it has a plug that looks like Fig. "A". It will fit directly into the proper type of 3-wire grounding receptacle. The unit is then grounded automatically each time it is plugged in.

Shown in Fig. "B" is a special grounding adapter (not allowed in Canada by the Canadian Electrical Code) which is available from your dealer and will permit using a 2-wire receptacle. The green grounding wire extending from the side of the adapter must be connected to a Permanent Ground.

If the unit requires from 150 to 250 volts, it has a plug like Fig. "C". No adapter is available and the plug must be used in the proper 3-wire grounding receptacle.

If you use an extension cord, be sure that it is a 3-conductor, grounding type cord. Grounding must be continuous from the tool plug to the grounded receptacle.



EXTENSION CORD


When using the tool at a considerable distance from power source, a 3-conductor, grounding-type extension cord of adequate size must be used for safety, and to prevent loss of power and over-heating. Use the table below for 120-volt tools. For 220-volt tools, see same chart but use a wire size corresponding to an extension cord length shown which is 1/2 the length of extension to be used.

P.T.I. Safety Rule #12 applies to Extension Cords as well as the Tool Power Cord. Before using cords, inspect them for loose or exposed wires and damaged insulation. Make any needed repairs or replacement before using your power tool.

Ampere rating (on nameplate)	0 to 2.0	2.10 to 3.4	3.5 to 5.0	5.10 to 7.0	7.10 to 12.0	12.1 to
Ext. Cable length		Wire Size (A.W.G.)				
25 ft. 50 ft. 75 ft. 100 ft. 150 ft. 200 ft.	18 18 18 18 16 16	18 18 18 16 14	18 18 16 14 12 12	18 16 14 12 12	16 14 12 10	14 12 10


Form No. 97747-01

MOUNTING SAW BLADES

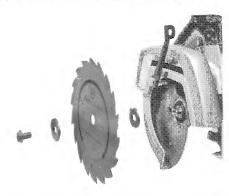

- BE SURE THE SAW IS DISCONNECTED FROM THE POWER SUPPLY!
- 2. To remove blade clamping screw:
 - a. ON NEW SAWS (without blade attached), turn screw counter-clockwise with blade wrench provided. If screw does not loosen easily from spindle, tap the outer end of the wrench sharply in a counter-clockwise direction with a piece of wood to "free" the screw threads. Remove screw and outer clamp washer.
 - b. ON SAWS WITH BLADE ATTACHED, turn the blade so that the single hole in the rim is exposed at the front of the saw. Put a nail through this hole and turn the blade counterclockwise until the nail is against the housing and stops the blade from turning. Turn the blade clamping screw counterclockwise with the blade wrench and remove the screw and outer clamp washer.
- 3. To attach the blade, retract the lower blade guard and slip the blade over the saw spindle against the inner clamp washer with printed side of blade out (teeth at bottom of blade pointing forward). Place outer clamp washer or spindle so that "flats" in washer fit "flats" on spindle. Thread on clamping screw to hold washer in position. Place a nail through hole in blade rim so that nail rests on front of saw base and keeps blade from turning. Tighten clamping screw (clockwise) securely with the blade wrench.

CUTTING DEPTH ADJUSTMENT

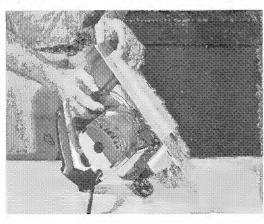

BE SURE SAW IS UNPLUGGED. When cutting any material with steel blades, the most efficient depth adjustment is one that permits the blade tooth depth only to project below the bottom of the material (except when using Carbide Tipped Blades, where only $\frac{1}{2}$ of the tooth tip should project below the material). This keeps blade friction at a minimum, removes sawdust from the cut and results in cooler, faster sawing. Correct cutting depth is obtained by: (1) Place the saw in the position shown above and loosen the wing nut on the inside of the blade guard. (2) Raise or lower the base until the blade projects from the base the desired distance. Retighten wing nut securely.

BEVEL ANGLE ADJUSTMENT

DISCONNECT PLUG FROM POWER SUPPLY BEFORE MAKING THIS OR ANY OTHER ADJUSTMENT. The adjustable base (shoe) permits bevel cutting at any angle between 45° and 90°. The quadrant on the front of the saw is calibrated for accurate adjustment. To set saw for bevel angle cut, loosen wing nut and tilt base to angle desired. Retighten wing nut securely.

SWITCH

Pull the trigger switch to turn the motor "ON". Releasing the trigger instantly turns the motor "OFF," but the blade will continue to rotate for a short time. For safer operation, this tool has no provision to lock the switch in the "ON" position.

OPERATION


ALWAYS DISCONNECT THE SAW BEFORE MAKING ANY ADJUSTMENTS. Place the work with its "good" side—the one on which appearance is more important—down. The saw cuts upward, so any splintering will be on the face that is up when you saw it. Support the stock so that the cut will be on your right, with the wider base portion of the saw base on that part of the work piece which is solidly supported, not on the section that will fall off when the cut is made. If the stock is short or small, clamp it down. Don't try to hold short pieces by hand.

Draw the required guide lines then rest the front of the saw base (shoe) flat on top of the work, with the guide notch correctly aligned. Run the stationary blade lightly against the edge of the work, back it off a little, and only then start the motor. Advance the saw into the wood. The telescoping blade guard will swing back by itself. Feed the tool at the speed at which the blade cuts easily. Remember that hardness and toughness can vary even in the same piece. A knotty or damp section can put a heavy load on the saw; when this happens feed more slowly. Feed the saw hard enough to keep it working without much decrease in speed. Forcing it beyond this makes for rough cuts, inaccuracy, and overheating of the motor.

Should your cut begin to go off the line, don't try to force it back on. It's best, of course to make errors on the waste side of the line. Then you can withdraw the saw, sight anew, and start a new cut a trifle inside the wrong one. In any event, withdraw the saw if you must shift the cut. Forcing a correction inside the cut can stall the saw and perhaps spoil the work. IF SAW STALLS, RELEASE THE TRIGGER, DISCONNECT PLUG FROM POWER SUPPLY AND THEN BACK THE SAW UNTIL IT IS LOOSE. BE SURE BLADE CLEARS THE WORK BEFORE RESTARTING CUTTING.

As you finish a cut, release the trigger and allow the blade to stop before lifting the saw from the work. As you lift the saw the spring-tensioned telescoping guard will automatically close under the saw. Remember the blade is exposed until this occurs; never reach under the work for any reason whatsoever. When you have to retract the telescoping guard manually (as is necessary for starting pocket cuts) always use the retracting lever.


POCKET CUTTING

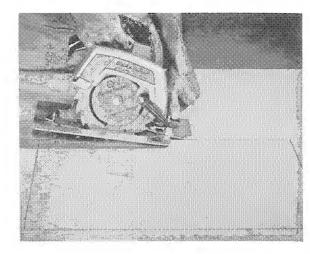

Adjust saw base (shoe) so blade cuts at desired depth. Tilt saw forward and rest front of base on material to be cut. Using lever, retract blade guard to an upward position. Lower rear of base until blade teeth almost touch cutting line. Now release the blade guard and its contact with the work will keep it in position to open freely as you start the cut. Start the motor and gradually lower the saw until its base rests flat on the material to be cut. Advance saw along cutting line until cut is completed. Release trigger and allow blade to stop completely before withdrawing the blade from the material. When starting each new cut, repeat as above. Never tie the blade guard in a raised position.

MOTOR BRUSHES

Carbon motor brushes should be inspected frequently for wear. To inspect brushes, FIRST, UNPLUG SAW FROM POWER SUPPLY. Then, with a screwdriver, slide the brush cover plates outward and the brush spring will pop out. Put the spring, with attached wire extended out of the opening into the position shown at right and tilt the

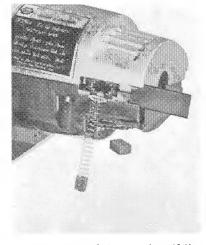

saw so that the carbon brush will drop out of the opening. If the brush is worn down to the grooved line on its side, a new brush is needed and can be obtained from any B&D Service Center—see "TOOLS, ELECTRIC" in Yellow Pages.


To reassemble, insert brush with worn end toward motor, or a new brush with longest distance from end to grooved line toward motor. Next, insert the small brass plate behind the brush, and then feed in the spring until the round spring cap fits flush with the opening. This allows the cover plate to be pushed back into the closed position.

LUBRICATION

Your tool was properly lubricated before leaving the factory. It is recommended that, at least once a year, you take or send the tool to a B&D Service Center for a thorough cleaning, inspection and lubrication of the gear case.

SAW ACCESSORIES:

RIP FENCE

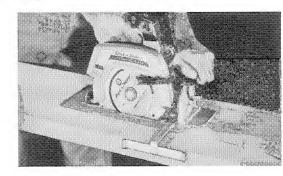

The Rip Fence permits fast, smooth rip-cuts without penciled lines. To install, insert Rip Fence in front slots, set Fence at desired distance from blade and tighten screw. The Rip Fence may also be inserted from the opposite side of the base slots. Cat. No. 55584



SAW PROTRACTOR

Guides accurate cross cuts at any angle from 0° to 90°. Calibrated in degrees. Has adjustable pointer. Cat. No. 49531



CUT-OFF GUIDES

One-piece guide for making accurate 90° or 45° cuts. Cat. No. 55582



CARRYING CASE

Gives easy portability and protection for your saw. Has room for extra blades, accessories and extension cord. Cat. No. 55580



SAW BLADES

Black & Decker manufacturers a complete line of blades which are available from your Distributor. These include: COMBINATION (crosscut & rip), CROSSCUT, PLYWOOD, PLANER, FLOORING, CARBIDE-TIPPED, METAL CUTTING, PLYWOOD, FRICTION, FRAMING, and RIPPING Blades.